

INSTRUCTIONS

LED WARNING LIGHT



3 Function adjust switch



12 - 24V

Change the flash pattern with the red button on the pcb.

1. Open the lens and press the red trigger switch, can switch to next function.
3 function switch by circulation.
2. The system have memory function.

Three function




Rotating: 125r/min

Single flash: 125times/min

Dual flash: 250times/min

strands
-lighting division

INSTRUCTIONS LED WARNING LIGHT

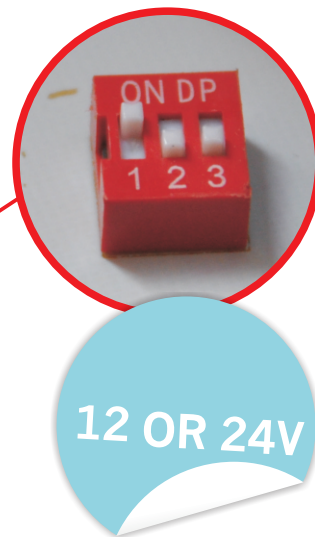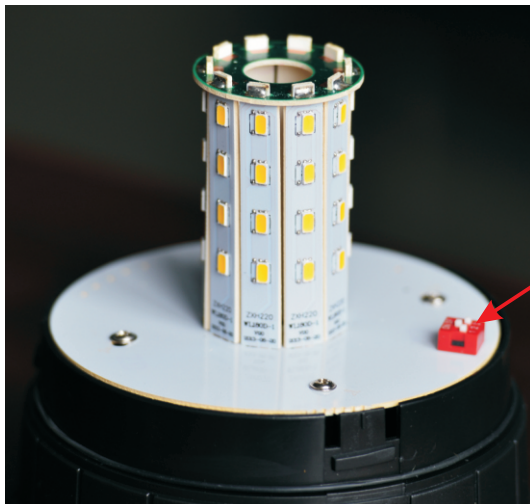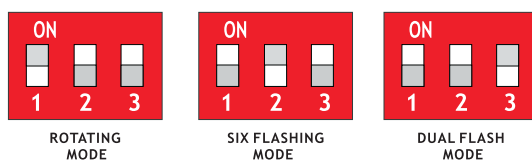

INSTÄLLNING

Ändra blyxtljusinställning med den röda knappen på kretskortet.
Justera efter önskat behov.

Funktioner:

- No1. Rotating mode
- No2. Six flashing mode
- No3. Dual flash mode

För att byta mönster, se diagrammet ovan.

strands
-lighting division